



VoomPC TFT Display Power via M2-ATX:

This cable has to be connected with the inner part of the VoomPC cable set :

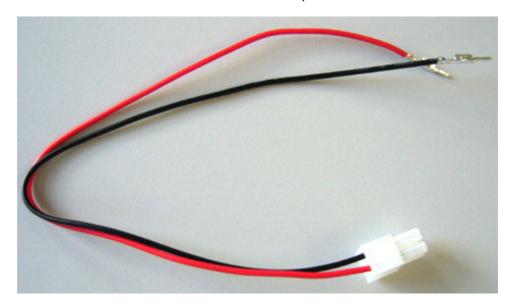


This is the inner part of the Voom cable set :

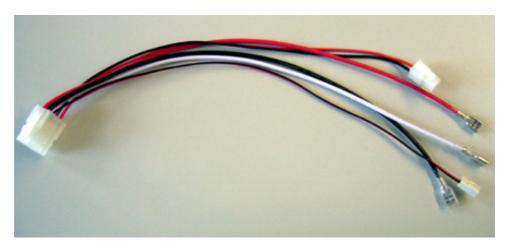





The above 2 slots are free and can be used for this purpose :

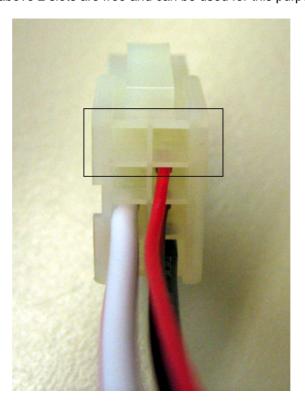

Plug in the red and black wire in such a way as shown on the following pictures :

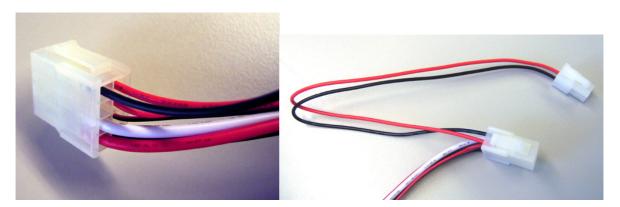


Now we take care of the outer part :

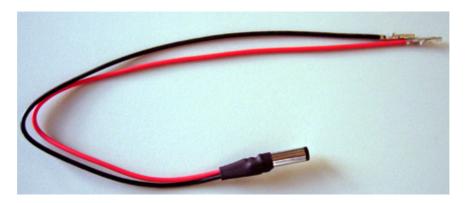




This has to be integrated into the outer part of the VoomPC cable set :

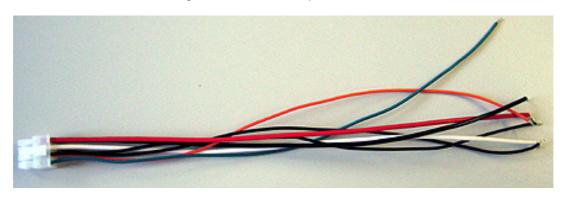


First the green wire has to be removed:

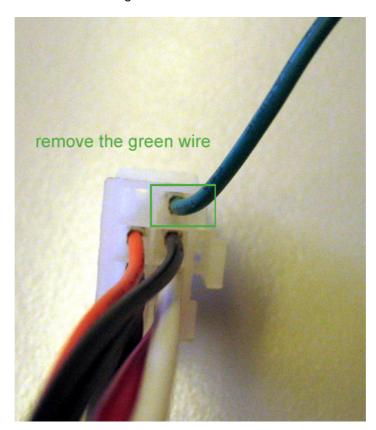





For this purpose you will need a long and thin tool for beeing able to press in the small "feet" as shown on the pictures below :

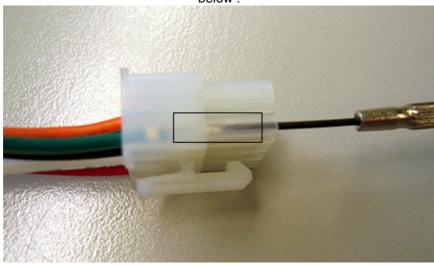

Press in the "feet" at both sides:

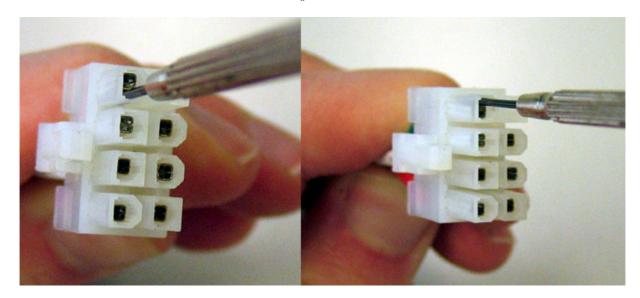


You now can pull out the green wire:

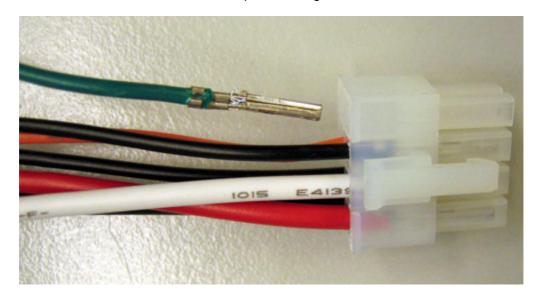




Now stick in the adapter cable :

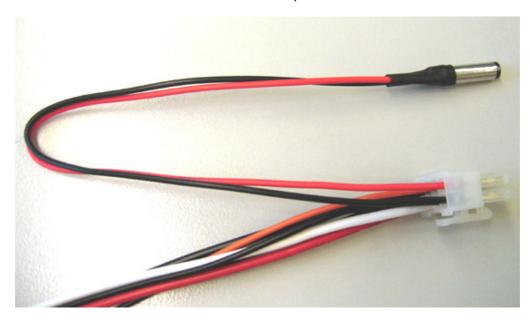

If you succeeded then it looks like this \rightarrow Red on red and black on black :

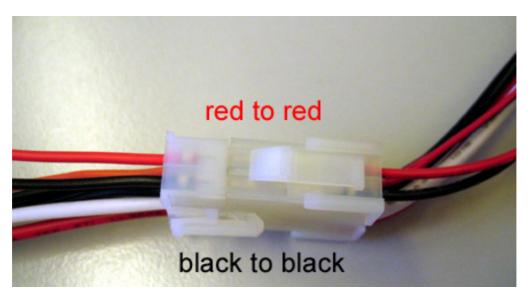

Author: B. Lambert - CarTFT.com

Last Update : 2007-10-18